

Why does the Camera Sensor Not Work Sometimes ?

- Because the camera sensor is looking at your capillaries, which are very small, your finger must be **warm** and held **very still**. Also you must be sure that your **LEFT** finger **covers the flash completely and that your finger tip is set gently over the lens** and not pressing hard as this pushes on the capillaries and hinders the reading.